



FB Cable Float Level Switch Operation Manual

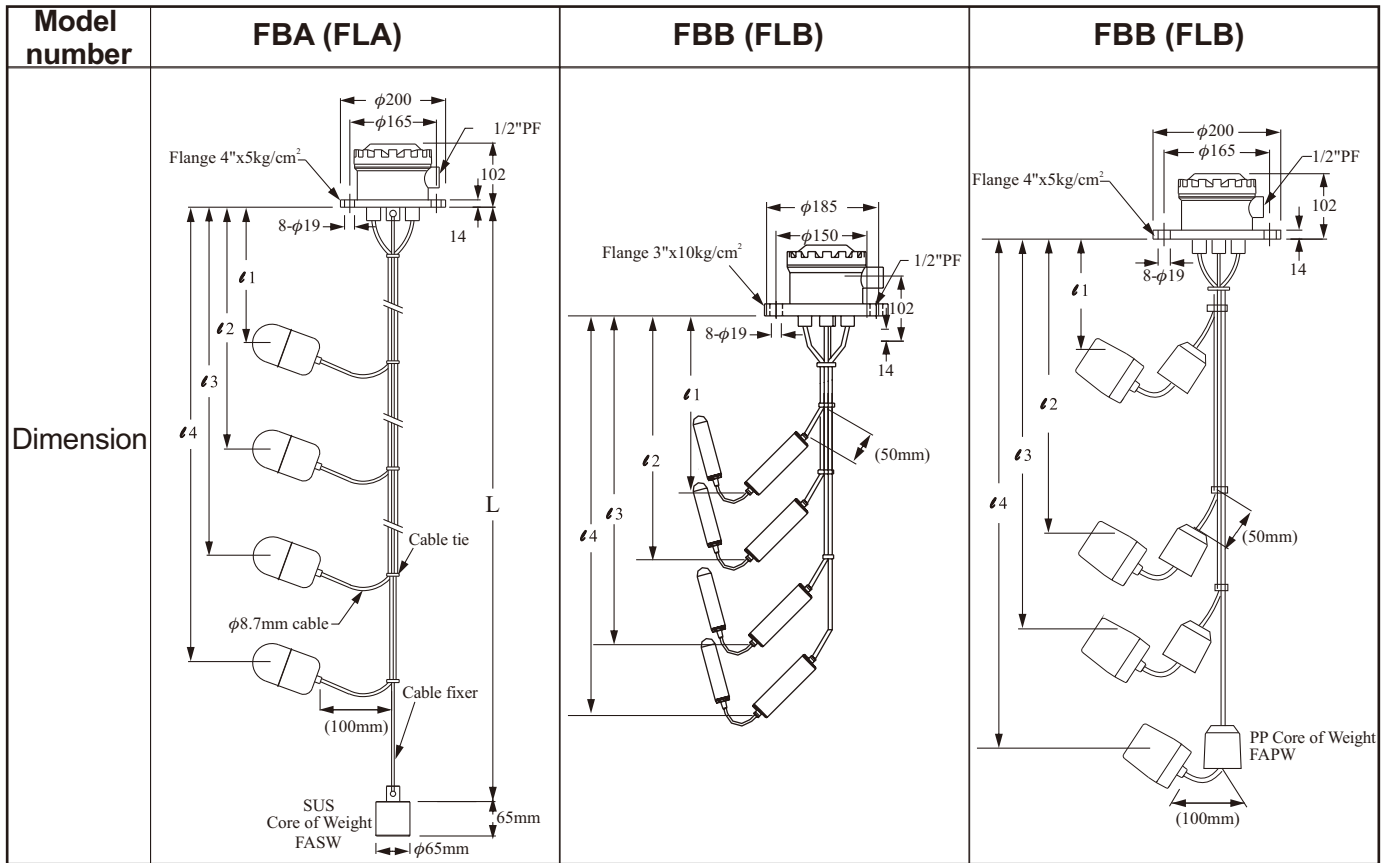


Terminal Drawing

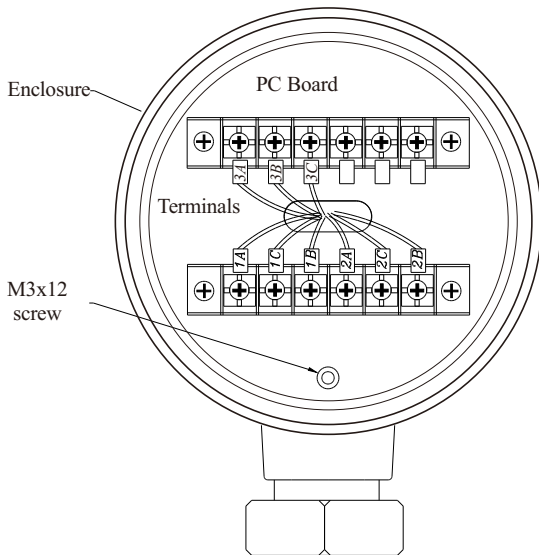


Installation guide

The distance from float to tank "A" must be longer than length "a". Otherwise, it is easy to act abnormally. In order to protect the pump, the lowest level of float "d" must be higher than the lowest level "D" of pump.

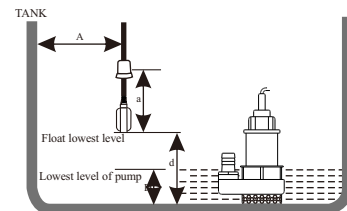

The float should be distant from water pump to prevent being sucked by the water pump.

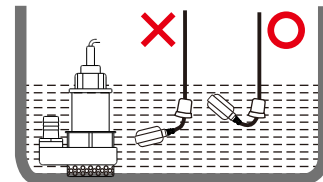

The installation position should be distant from inlet to prevent the false alarm by water impact. If that cannot be avoided, please install additional devices like pipe or plate to decrease the impact.

